
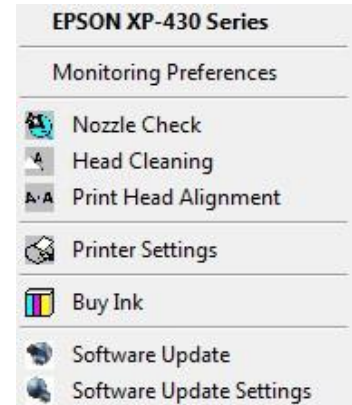
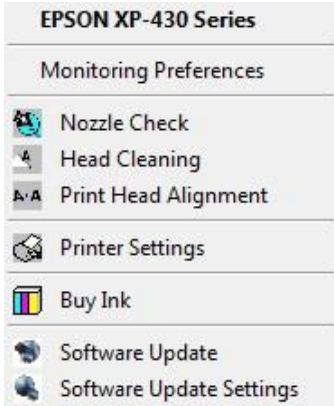

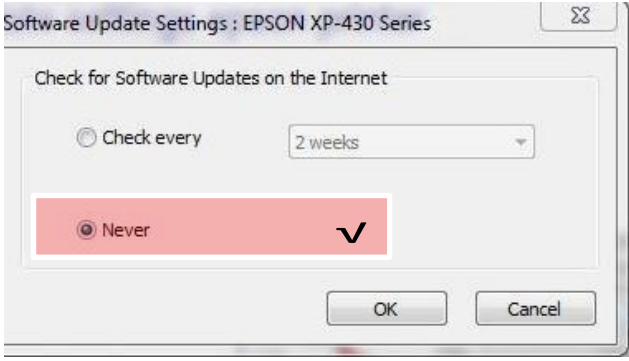


Instruction for EPSON T288XL printer downgrade

DATE: 2019.9.12

Part1 : Disable future firmware updates

<p>1.Right click the icon of the Epson XP430 Printer in the windows Taskbar.</p>	<p>2.Right click the icon of the Epson XP430 Printer in the windows Taskbar.</p>
	
<p>3.From the list of selections – Make sure you select “Software Update Settings”</p>	<p>4.Select the option “Never” and then select “OK”.</p>
 	

Instruction for EPSON T288XL printer downgrade

DATE: 2019.9.12

Part 2 Firmware Downgrade Instruction



Update date : 2019.8.29

1. Printer Model List

Series	Model Name	Current Firmware Version	Downgrade to Firmware Version	How to downgrade
T288XLBKCMY	Expression Home XP-330	SO20J8	JO10G3	Method A
	Expression Home XP-430	SO20J8	MO10G3	Method A
	Expression Home XP-434	SO20J8	MO10G3	Method A
	Expression Home XP-340	SO20J8	MJ10H8	Method B
	Expression Home XP-440	SO20J8	SO10H8	Method B
	Expression Home XP-446	SO20J8	SO10H8	Method B

Note: Please choose the indicated software to downgrade the firmware according to your printer model and current firmware version.

2. Power the Printer off.

Method A	Method B
While the Printer is off press and hold home, power, left arrow and cancel buttons on the printer until you get the ROM menu which is white text over a black background.	While the Printer is off, press and hold the buttons power, down arrow, left arrow and cancel on the printer altogether until you get the ROM menu displayed is white text over a black background.
	

3. Run the old version of the firmware package for the corresponding machine.


Model Name	Link
Expression Home XP-330	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xNzc1Ny5leGU=
Expression Home XP-430	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xNzc2NS5leGU=

Instruction for EPSON T288XL printer downgrade


DATE: 2019.9.12

Expression Home XP-434	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xNzc2NS5leGU=
Expression Home XP-340	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xOTEzNi5leGU=
Expression Home XP-440	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xOTEzNC5leGU=
Expression Home XP-446	https://www.latestprinterdrivers.com/goto/aHR0cHM6Ly9mdHAuZXBzb24uY29tL2RyaXZlcnMvZXBzb24xOTEzNC5leGU=

4. Click next.

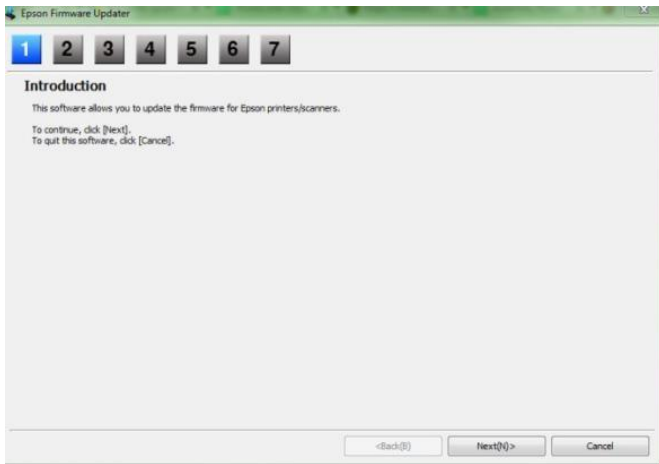


5. Agree to terms and click next.

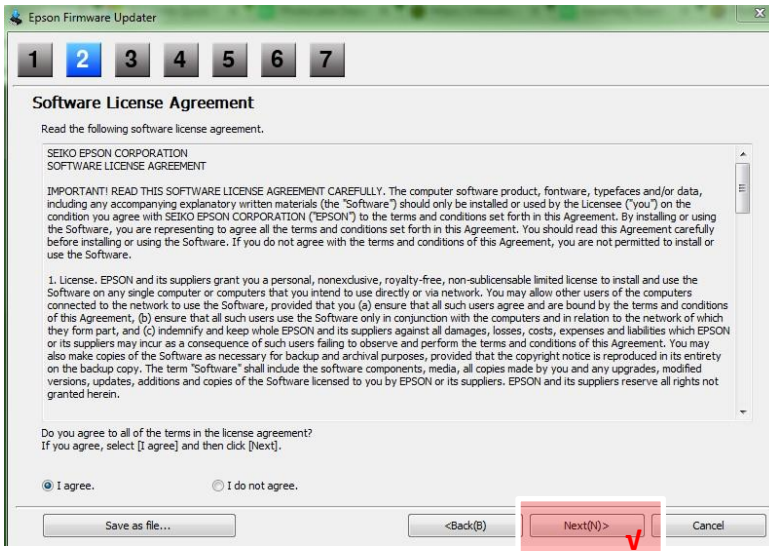

Instruction for EPSON T288XL printer downgrade


DATE: 2019.9.12

6. Click next.

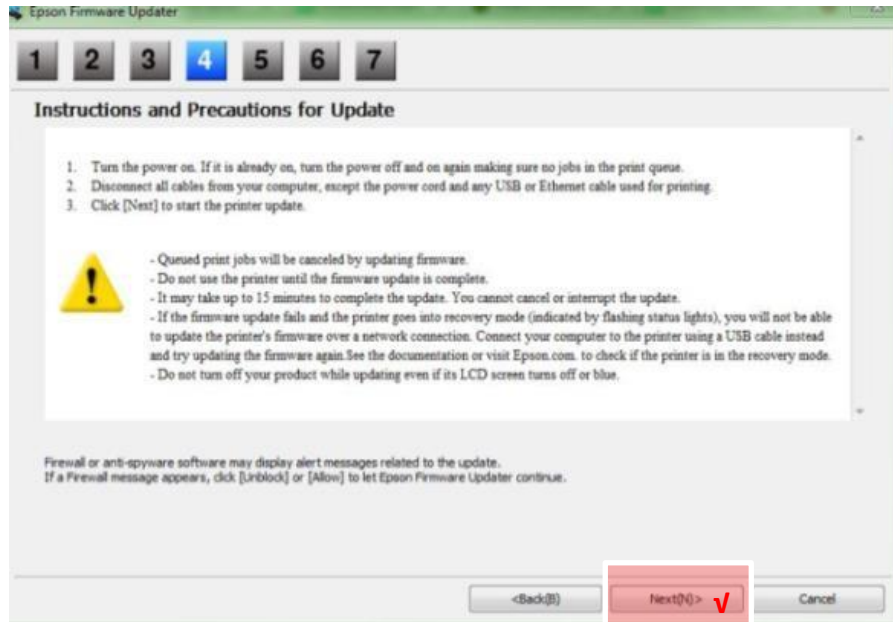

7. Check box, you will get a pop up message that reads: do you want to overwrite it?

Click yes on that.

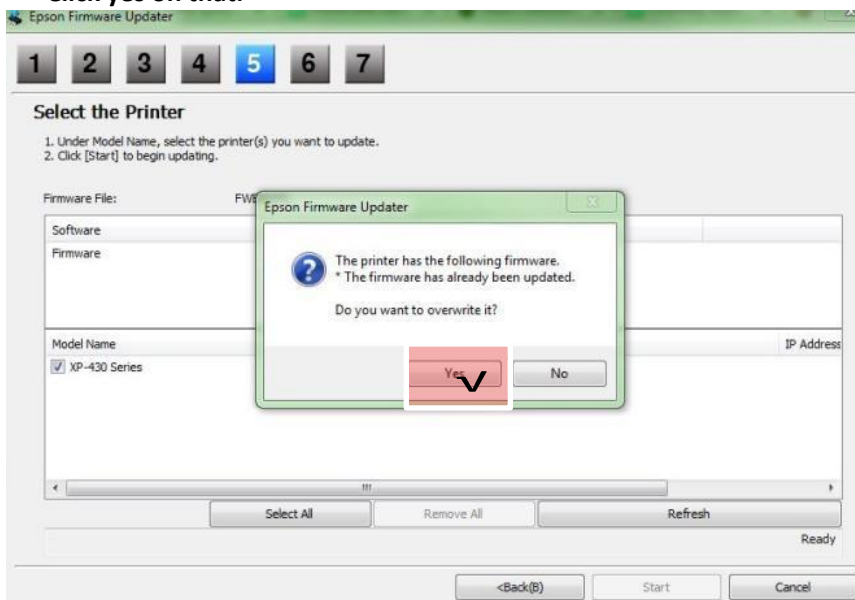


IT IS IMPERATIVE THAT THE POWER TO THE PRINTER DOES NOT GET INTERRUPTED IN THIS STAGE, OTHERWISE THE PRINTER WILL BE DAMAGED BEYOND REPAIR.


Instruction for EPSON T288XL printer downgrade

DATE: 2019.9.12

8. Click start.

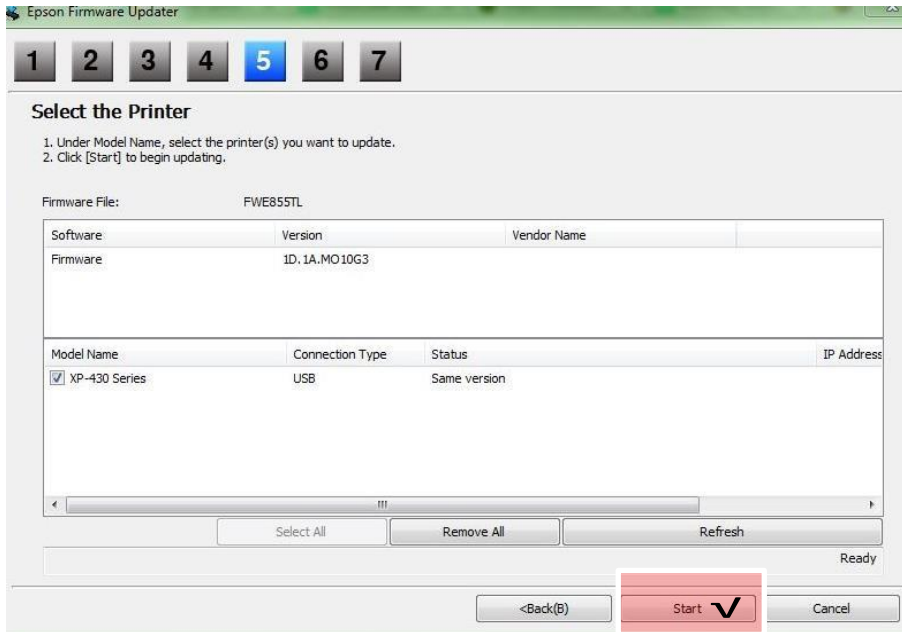

9. Check Printer screen and wait until it displays the word finished on it, when it does click finish in the installer.

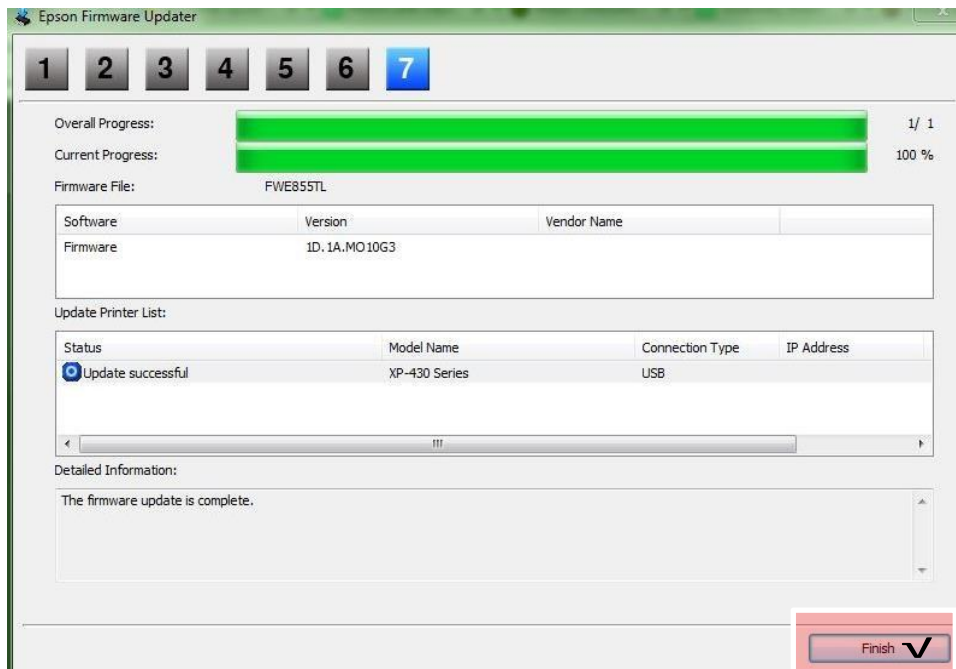

Instruction for EPSON T288XL printer downgrade

DATE: 2019.9.12



10. Disconnect power cable from the back of the printer and reconnect. Power printer on.
11. Wrong Ink tank message may still show on the Printer after this. Remove inks and reinstall them, inks will now charge.